

INSTRUCTION MANUAL FOR WATCH CALIBRE AS01



THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.

Button batteries are hazardous whether new or used. Keep batteries out of reach of children.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention. Contact the Australian Poisons Information Centre immediately on 13 11 26


(New Zealand 0800 764 766) for 24 / 7 fast, expert advice.




LORUS

■ CHARACTERISTICS Indicated by the hour, minute 1. Time:

- and second hands. 2. Calendar: Displayed in numerals.
- 3. Solar charging function
 - **Energy depletion forewarning function**
- DISPLAY AND CROWN (CALENDAR MODEL)

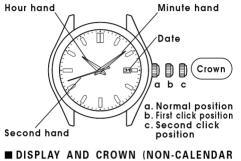

MODEL)

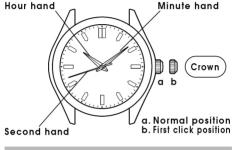


SCREW DOWN CROWN [for models with screw down crown]

Unlocking the crown

Turn Crown counter-

- clockwise until you no longer feel the threads turning. 2 Crown can be pulled



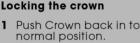

- 2
- Turn Crown clockwise while pressing it lightly until tight.



■ HOW TO CHARGE AND START THE WATCH When you start the v



When you start the control when the energy in the rechargeable battery is reduced to an extremely charge it low level, charge it sufficiently by exposing the watch to light.

It is not necessary to charge the watch fully. It is important, however, to charge the watch sufficiently, especially in case of initial charge.

I GUIDELINES FOR CHARGING TIME

	Time required(approx.)						
Illumination (Lux)	Light source	Environ- ment	Condition				
			Α	B *	С		
700	Fluorescent lamp	Inside office	1	35 hours	100 mins		
3,000		30W 20 cm	60 hours	4 hours	25 mins		
10,000	Sunlight	Cloudy weather	20 hours	1.5 hours	8 mins		
100,000		Fine weather	5 hours	15 mins	2 mins		
The above table provides only general guidelines.							
<reference></reference>							

Condition A: Time required for full charge Condition B : Time required for steady operation Condition C: Time required for 1 day's charge

- * The values in this column represent the charging times required until the second charging times required until the second hand moves constantly at 1-second intervals after the watch starts operating with the second hand moving at 2-second intervals. intervals.
- Even if the watch is not charged for the time specified in the column, the second hand may temporarily move at 1-second intervals. But it will soon resume moving at 2-second intervals, and therefore, charge the watch for more than the specified period.


 When the watch is fully charged, it will what the specified period.
- When the watch is fully charged, it will continue to operate for about 4 months.

CAUTION

- When charging the watch, do not place it too close to a hot light source such as a photo flash light, spotlight or incandescent light as this can greatly raise the watch temperature.
- When charging the watch by sunlight, do not leave it exposed to the sun for a long time, on the dashboard of a car, etc. as this can greatly raise the watch temperature. Make sure the watch temperature does not exceed 50°C while charging, to avoid damage to the parts inside.

■ HOW TO USE CALENDAR MODEL

1. HOW TO SET TIME

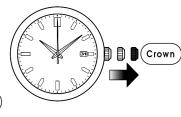

Pull out to the second click position when the second hand is at the 12 o'clock position.



(Crown

Take AM/PM into consideration when setting the hour and desired time.

When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact minute(s).

Push back simultaneously with a time signal.

2. HOW TO SET DATE




(Crown

Turn counterclockwise to set the date.




not set the date between 9:00 P.M. and 1:00 A.M.

Push back to the normal position.

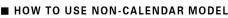

HOW TO SET TIME

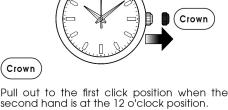

Turn to set the hour and minute hands



When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact minute(s).

Push back simultaneously with a time signal.



intervals

battery is reduced to an extremely low level, the second hand starts moving at 2-second intervals instead of the normal 1-second

- ENERGY DEPLETION FOREWARNING FUNCTION When the energy stored in the rechargeable
- In that case, recharge the watch as soon as possible by exposing it to light. Otherwise, the watch may stop operating in about 1 day. To prevent the energy depletion

When you wear the watch, try not to keep it covered by your clothes. When the watch is not in use, leave it in a bright place as long as possible.

- Make sure that the watch temperature does not exceed 50°C.
- NOTES ON POWER SUPPLY
 - This watch is provided with a rechargeable battery for exclusive use with the watch. Unlike conventional battery-powered

- watches, therefore, battery réplacement tis not necessary.

 The solar cell is a clean energy source, having no adverse effect on the natural environment.
- A CAUTION

Never insert a conventional silver oxide battery in your watch as it may explode, generate an intense heat or catch fire. The watch is designed not to operate The watch is designed not to operate even if the battery is installed in it. CARE OF YOUR LORUS WATCH WATER RESISTANT

Condition of use Accidental

Indication on the dial/ case back	contact with water, such as splashes and rain	Swimming and taking a shower	Skin diving	Scuba diving
NO	NO	NO	NO	NO
WATER RESISTANT	YES	NO	NO	NO
WATER RESISTANT (50M/5 BAR)	YES	YES	NO	NO

- YES
- If your watch is 200 M/20 BAR, 100 M/BAR or 50 M/5 BAR water resistant, it so indicated on the dial/case back. 100 M/10 Do not press or turn the crown when the watch is wet. If the watch is exposed to salt water, rinse it in fresh water and then wipe it
- Leather st except so straps

caution:

thoroughly dry.

not are water resistant indicated, even if the head is water resistant.

 ALLERGIC REACTION Because the case and band touch the skin directly, it is important to clean them regularly. If not, shirt sleeves may be stained and those with delicate skin may

develop a rash. Please wear the watch with some play to avoid any possible allergic reaction. If you develop a rash on your wrist, stop wearing and consult a

physician. MAGNETISM Your watch will be adversely affected by strong magnetism. Keep it away from close contact with magnetic objects.

SHOCKS AND VIBRATIONS

Your watch may be worn for normal sports activities, However, be careful not to drop it or hit it on hard surfaces. **TEMPERATURE**

GUARAŇTĖE.

Your watch is preadjusted so that constant accuracy may be insured at normal temperature. **■ SERVICE**