



A Watch You Can Trust

**INSTRUCTION MANUAL FOR
WATCH CALIBRE
W942**



WARNING



THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.

Button batteries are hazardous whether new or used. Keep batteries out of reach of children.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention. Contact the Australian

Poisons Information Centre immediately on 13 11 26

(New Zealand 0800 764 766) for 24 / 7 fast, expert advice.

 
Instruction & Warranty Booklet

DIGITAL STOPWATCH R23 Series (Cal. W942)


■ CHARACTERISTICS

- Stopwatch:** Measures up to 9 hours, 59 minutes, 59 seconds and 99 with 1/100 second readout.
 - Lap time measurement:** Up to 9 lap times can be measured. The lap time difference and the fastest lap time are calculated and displayed during the measurement.
- Time/calendar display:** Hour, minutes, seconds, month, date and day of the week.
 - Automatic calendar adjustment:** Calendar adjusts automatically for odd and even months including February of leap years, but not for February of common years.
 - Time indication:** Changeover between 12- and 24-hour indications is possible.
- Daily alarm:** The alarm can be set to ring on a 24-hour basis.
- Dual time:** Time of a different time zone can be set and displayed.
- Stroke function:** The watch can be set to beep at a selected rate to serve as a pacemaker in jogging, etc.
- Countdown timer:** Up to 9 hours 59 minutes and 59 seconds can be set in seconds.

■ BUTTONS AND DISPLAYS

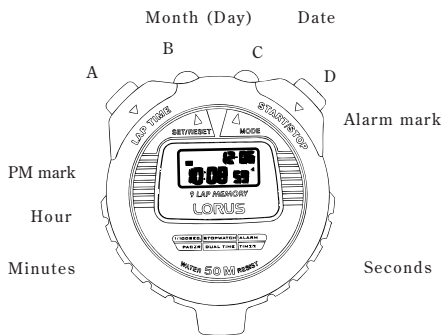

 The selection of the display can be made in the following order with each depression of button "C".

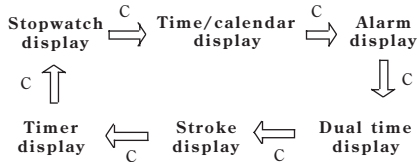


* A flashing display mark indicates that the corresponding function is in use.

INSTRUCTIONS for Cal. W942

■ HOW TO USE THE STOPWATCH


- The stopwatch can measure up to 9 hours, 59 minutes, 59 seconds and 99 in 1/100 seconds.
- * Even if the stopwatch display is changed to another while the measurement is in progress, it continues counting properly. After the stopwatch is used, however, be sure to reset it as the battery energy is consumed enormously to shorten the battery life.

 Stopwatch display mark

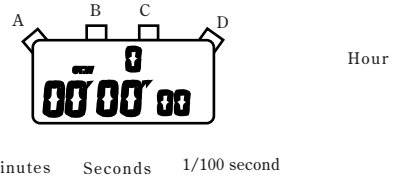

Stopwatch operation

 Depress button "C" to show the stopwatch display.

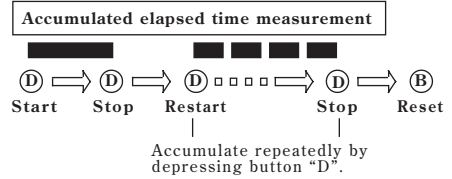

Lap time measurement

 
- "Lap time" refers to an elapsed time required to cover a given section of the whole distance.
- At the start of the activity, depress button "D" to start the stopwatch.
 - At the end of the first lap, depress button "A". The first lap time and lap number are displayed, though the second lap time is being measured internally.
 - Depress button "A" to release the lap time before the end of the second lap. The first lap time and lap number disappear, and the measurement in progress and "0" are displayed in place of the lap time and lap number, respectively.
 - At the end of the second lap, depress button "A". The second lap time and lap number are displayed, though the third lap time is being measured internally.
 - Measurement and release of the lap time can be repeated by depressing button "A".
 - At the end of the activity, follow either of the two methods below.
 - To display the final lap time, depress button "A". Then, depress button "A" to release the lap time, and depress button "D" to stop the measurement.
 - * The time displayed when button "D" is depressed is not the total elapsed time of the activity, that is, the time that elapsed from the start until the end of the activity but the time that elapsed from the start until the stop of the measurement.
 - To display the total elapsed time of the activity, depress button "D" to stop the measurement.
 - Depress button "B" to reset the stopwatch.

Notes:

- When a lap time measured is the fastest among the lap times previously measured, a short beep rings to signal that the memory has been updated with the new fastest lap time.
- The lap number counts up to "9". After "9", the number returns to "1".

Lap time difference and the fastest lap time

- While a lap time is being displayed, depress button "B". With each depression of the button, the difference between the displayed lap time and the previous lap time is displayed in the following order.



To return to the measurement in progress, depress button "A".

- The lap time difference is displayed without a plus or minus sign. Instead, the lap number of the faster lap time is always displayed at the right of the "-" mark.

 
Ex.)



The display should be read as "Lap 2 is 5 seconds 87 faster than Lap 3".


- Notes:**
- While the measurement in progress is shown on the display, the lap time difference and the fastest lap time cannot be shown by depressing button "B".
 - While the latest lap time, lap time difference or the fastest lap time is shown on the display, the display cannot be changed to another by depressing button "C".

■ HOW TO SET THE TIME/CALENDAR

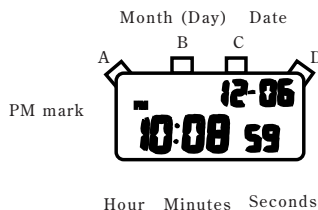

- * With each depression of button "A", month and day are displayed alternately.
- * With each depression of button "D", the display changes over between the 12- and 24-hour indications.

 - Depress button "C" to show the time/calendar display.
- Depress button "B" to show the time/calendar setting display. The second digits start flashing.
- Selection of the digits to be adjusted (flashing) is made in the following order by depressing button "D".




- Depress button "A" to set the flashing digits. One digit is advanced with each depression of button "A". Digits except seconds move quickly by keeping button "A" depressed.
- After all the adjustments are completed, depress button "C" to return to the time/calendar display.

Seconds setting


When the seconds digits are flashing, depress button "A" in accordance with a time signal. The seconds are reset to "00" and start immediately.

Note: When setting the hour digits in the 12-hour indication, check that AM/PM is properly set. Only "PM" is displayed and there is no indication for the AM setting. In the 24-hour indication, there is no indication.

 ■ HOW TO SET THE ALARM

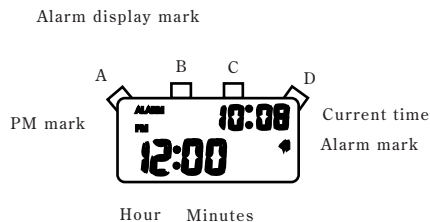

 - Depress button "C" to show the alarm display.
- Depress button "B" to show the alarm setting display. The hour digits start flashing.
- Depress button "D" to select the digits to be adjusted (flashing).



- Depress button "A" to set the digits. One digit is advanced with each depression of the button. The digits move quickly by keeping the button depressed.
- After all the adjustments are completed, depress button "C" to return to the alarm display.

Notes:

- When the time function is displayed in the 24-hour indication, the alarm is also displayed in the 24-hour indication.
- When setting the hour digits in the 12-hour indication, check that AM/PM is properly set. Only "PM" is displayed and there is no indication for the AM setting. In the 24-hour indication, there is no indication.

Engagement/disengagement of the alarm

- With each depression of button "D" in the alarm display, the alarm is engaged and disengaged alternately.


	Alarm engaged
	Alarm disengaged

- The alarm rings at the designated time for 18 seconds and stops. To stop it manually, depress button "A", "B", "C" or "D".

■ HOW TO SET THE DUAL TIME

Time of a different time zone can be set and displayed together with the time you have set in "HOW TO SET THE TIME/CALENDAR".

 Dual time display mark

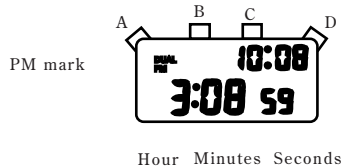


- Depress button "C" to show the dual time display.
- For dual time setting, refer to "HOW TO SET THE TIME/CALENDAR".

■ HOW TO USE THE STROKE FUNCTION

- 4 different stroke rates (60, 80, 120 and 160 strokes per minute) have been preset for the stroke function, and the watch beeps at a selected preset stroke rate. Therefore, it can serve as a pacemaker in such activities as jogging.

 
Stroke display mark

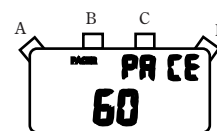

Number of strokes per minute

Selection of the preset stroke rate

 - Depress button "C" to show the stroke display.
- Depress button "B" to select the desired stroke rate. Selection of the stroke rate is made in the following order by depressing button "B".



Operation of the stroke function

- Depress button "D" in the stroke display. The watch starts beeping at the selected rate.

 
* To turn off the stroke sound, depress button "D". With each depression of button "D", the stroke sound is turned on and off alternately.

■ HOW TO USE THE COUNTDOWN TIMER


- The timer can be set up to 9 hours, 59 minutes and 59 seconds in seconds.
- The remaining time is displayed in 1/100 seconds.

Timer setting

Timer display mark

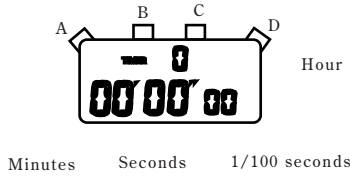

 
1. Depress button "C" to show the timer display.
2. Depress button "B" to show the timer setting display. The hour digit starts flashing.
3. Depress button "D" to select the digits to be adjusted (flashing).



4. Depress button "A" to set the digits. One digit is advanced with each depression of the button. The digits move quickly by keeping the button depressed.
5. After all the adjustments are completed, depress button "C" to return to the timer display.

Timer operation

 Depress the buttons in the following order.

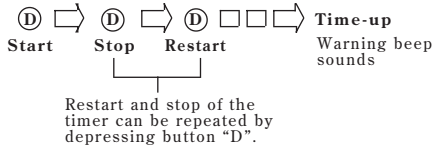

* A warning sound beeps for 18 seconds when the set time is up. To stop it manually, depress button "A", "B", "C" or "D".

■ BATTERY CHANGE

The miniature lithium battery SEIKO SR1130W, which powers your watch should last approximately 1 year. However, because it is inserted at the factory, the actual life of the battery once in your possession may be less than 1 year.

Be sure to replace the battery to prevent any possible malfunction as soon as it runs down. To replace the battery, we recommend taking the watch to a local watch repair shop.

■ CARE AND SERVICE OF YOUR LORUS WATCH

1. Care:

• BATTERY

CAUTION

Do not expose the old battery to fire or recharge it. Keep it at a place beyond the reach of children.

• WATER RESISTANT

Your watch is classified into one of the following four groups by the degree of water resistance. Please read the appropriate item below for proper use.

If your watch is water resistant, "WATER RESISTANT" is shown on the back of your watch case. If your watch is 100m or 50m water resistant, it is so indicated on the dial. If your watch is non-water resistant, there is no such indication.

Water resistant: These watches are designed to withstand accidental contact with water, for example, splashes or rain, but should not be worn while swimming or diving.

Water resistant (50m): These watches are suitable for swimming and can be worn in the shower, but not for diving.

Water resistant (100m): These watches are suitable for swimming or skin diving (without heavy breathing apparatus), but not for scuba diving.

Non-water resistant: Care should be taken not to get your watch wet as water may damage the movement.

- Do not depress any buttons when the watch is wet.
- If the watch is exposed to salt water, rinse it in fresh water and then wipe it thoroughly dry.

• ANTI-MAGNETIC

Your watch will not be affected by magnetism generated by household electric appliances.

• ANTI-SHOCK

Your watch may be worn for normal sports activities, but be careful not to drop it or hit it on hard surfaces.

• TEMPERATURE

Your watch is preadjusted that constant accuracy may be insured at normal temperature.

2. Service:

If your LORUS watch requires repair or servicing, send it to the Authorized Lorus Service Center below:

COSERV
P.O. Box 677
Mahwah, NJ 07430

For local repair service in California, please consult the Yellow Pages of your local telephone directory. When you send your Lorus watch for service under warranty to the address above, please enclose a \$4.00 check or money order (payable to COSERV) to cover the cost of handling.

- Because of possible loss, we recommend insuring your watch when using the mails. Never include a special watchband or gift box in your shipment.
- As a convenience in obtaining service at the Authorized Lorus Service Center listed above, participating Lorus retailers will be pleased to provide you with a free, pre-addressed Watch Service Mailer.

LIMITED WARRANTY

This LORUS® watch (except for battery, crystal, bracelet, or strap) is warranted against defects in manufacture, for a period of one year from the date of original purchase. This limited warranty is offered by Lorus Time and not by the retailer from whom the watch was purchased.

Within the warranty period, your watch will be repaired by Lorus Time installing either a new or completely reconditioned movement or, at our option, supplying you with a new replacement watch (i.e., watch of equal value and similar appearance).

Lorus Time will not provide any warranty service:

- a) if there was damage while in the possession of the consumer not resulting from a defect in manufacture;
- b) if there was damage caused by tampering with or opening the watch or by other than normal use; or
- c) if repairs have been performed other than by the Authorized Lorus Service Center.

Lorus Time reserves the right to charge you for a replacement battery if the battery in your watch is depleted.

LORUS TIME DISCLAIMS LIABILITY FOR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING WARRANTY OF MERCHANTABILITY, WITH RESPECT TO THIS WATCH. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation may not apply to you.

LORUS TIME LIMITS THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY TO ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

How to obtain service under the Warranty

To obtain service under the warranty send it with the completed warranty coupon and a \$4.00 check or money order (payable to COSERV), to cover the cost of handling, to the Authorized Lorus Service Center below:

COSERV
P.O. Box 677
Mahwah, NJ 07430

For local repair service in California, please consult the Yellow Pages of your local telephone directory. Note that the \$4.00 handling charge is not a requirement to obtain warranty service provided your watch was purchased from a retailer in the State of California.

As a convenience in obtaining warranty service at the Authorized Lorus Service Center listed above, participating Lorus retailers will be pleased to provide you with a free, pre-addressed Watch Service Mailer. If a mailer is not available, please wrap the watch securely in a small package, print our address and your name and return address on the package. Because of possible loss, we recommend insuring your watch when using the mails. Never include a special watchband or gift box in your shipment. Any postage, insurance and shipping costs incurred in sending the watch for service are the responsibility of the owner.

Please complete, detach, and enclose

**LORUS WATCH
WARRANTY COUPON**

NAME _____

ADDRESS _____

CITY _____ ZIP _____

STATE _____

PURCHASE DATE _____

WHERE PURCHASED _____

DESCRIBE PROBLEM _____

LORUS