



A Watch You Can Trust

**INSTRUCTION MANUAL FOR
WATCH CALIBRE
1N001**



WARNING



THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.

Button batteries are hazardous whether new or used. Keep batteries out of reach of children.


If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention. Contact the Australian Poisons Information Centre immediately on 13 11 26 (New Zealand 0800 764 766) for 24 / 7 fast, expert advice.



INSTRUCTION MANUAL

ANALOGUE QUARTZ

HOW TO USE NON-CALENDAR MODEL

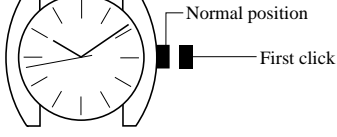

Pull the crown OUT to the FIRST click and set the time. Then push the crown IN.

Note: When you set the time, first set the minute hand to a properly advanced time, then return the minute hand to the correct time by turning it COUNTERCLOCKWISE.

Time setting for Cal. V516

Turn the hands counterclockwise to advance them 4 to 5 minutes ahead of the desired time. Then turn them clockwise to set them to the exact time.

HOW TO USE DAY/DATE MODEL

The day of the week can be displayed bilingually (English/another language) and you can select either.

1. How to set the day and date



Pull out the crown to the first click position. (The crown of this watch can be pulled out to the second click position.)

Turn the crown and set the previous day and date. (The day and date can be selected alternatively and displayed in English or the other language.)

Pull out the crown to the second click position and set the present day and date by turning the minute hand.

Day setting for Cal. V828 (Ladies' Day/Date)

Turn the hands clockwise and counterclockwise repeatedly between 11:15 pm and 3:45 am to select the desired day and language.

Note: Do not attempt to set the day and date between the times of 9:00 pm and 4:00 am as this may cause the day and date displays to change out of sequence.

2. How to set the time



Pull out the crown to the second click position and the second hand stops. The second hand should be stopped on 12 o'clock position.

Turn the crown and set the desired time.

Push the crown in to the normal position in accordance with a time signal.

- Be sure to check that the AM/PM is correctly set. (The day and date are designed to change once every 24 hours.)
- To adjust the correct time for a quartz watch, it is necessary to advance the minute hand 4 or 5 minutes ahead of the correct time and then turn it counterclockwise to set the designated time.

LUMIBRITE WATCH

(dial, hands, buttons, case, bezel, strap etc.)



If your watch is a LORUS LUMIBRITE watch, It has following features.

 
LORUS LUMIBRITE watches absorb and store light energy from natural and artificial light sources and emit light in the dark. They are made of environmentally friendly material, and therefore, are harmless to human beings and the environment.

- With a full charge, LORUS LUMIBRITE watches glow in the dark hours longer than conventional luminous watches of this type. If exposed to a light of more than 500 lux (i. e., the brightness of a typical office) for approximately 10 minutes, or direct sunlight for 2 minutes, they will glow for hours.
- Since LORUS LUMIBRITE watches emit the light they store, the brightness will decrease gradually over time. The length of time they will glow may also differ slightly depending on such factors as the brightness of and distance from the light source used to charge the watch.

LORUS LITE(RZA-SERIES)



While the button is kept depressed, the electroluminescent light evenly illuminates the entire watch dial for easy viewing in the dark.



Notes:

1. LORUS LITE watches work with one battery. When the electroluminescent light begins to lose its luminance, this is an indication that the battery is depleted. We recommend that you change the battery before the watch itself stops.
2. If the electroluminescent light is used continuously for a long time, the battery life may be less than the specified period.

CARE AND SERVICE OF YOUR LORUS WATCH

1. Care:

• BATTERY



CAUTION

Do not expose the old battery to fire or recharge it. Keep it at a place beyond the reach of children. If a child swallows it, consult a doctor immediately.

• **WATER RESISTANT**

Indication on the dial/case back \ Condition of use	Accidental contact with water, such as splashes and rain	Swimming and taking a shower	Skin diving	Scuba diving
No indication	NO	NO	NO	NO
WATER RESISTANT	YES	NO	NO	NO
WATER RESISTANT (50 M/5 BAR)*	YES	YES	NO	NO
WATER RESISTANT (100 M/10 BAR or above)*	YES	YES	YES	NO

* If your watch is 200 M/20 BAR, 100M/10 BAR or 50 M/5 BAR water resistant, it is so indicated on the dial/case back.

- Do not operate the crown when the watch is wet.
- If the watch is exposed to salt water, rinse it in fresh water and then wipe it thoroughly dry.

Caution:

Leather straps are not water resistant except where indicated, even if the watch head is water resistant.

• **ALLERGIC REACTION**

Because the case and band touch the skin directly, it is important to clean them regularly. If not, shirt sleeves may be stained and those with delicate skin may develop a rash. Please wear the watch with some play to avoid any possible allergic reaction. If you develop a rash on your wrist, stop wearing and consult a physician.

• **MAGNETISM**

Your watch will not be affected by magnetism generated by household electric appliances.

• **SHOCKS AND VIBRATIONS**

Your watch may be worn for normal sports activities, but be careful not to drop it or hit it on hard surfaces.

• **TEMPERATURE**

Your watch is preadjusted so that constant accuracy may be insured at normal temperature.

2. Service:

When your LORUS watch requires repair or servicing, please see the enclosed "WARRANTY/GUARANTEE"

BATTERY CHANGE

The miniature battery which powers your watch should last as individually specified at right. However, because it is inserted at the factory, the actual life of the battery once in your possession may be less than the specified period.

Be sure to replace the battery to prevent any possible malfunction as soon as it runs down. To replace the battery we recommend taking the watch to a local watch retailer.

* The calibre number of your watch is inscribed on the case back of the watch.



CAL. NO.	BATTERY	BATTERY LIFE
V401	SEIKO/MAXELL/SONY SR521SW	Approx. two (2) years
V500	SEIKO/MAXELL/SONY/MATSUSHITA SR626SW	Approx. four (4) years *Approx. two (2) years **Approx. one and a half (1.5) years
V501(JPN)		
V501(HK)*		
V506*		
V507**		
V515		
V671	SEIKO/MAXELL/SONY SR920W	Approx. two (2) years
V732	SEIKO/MAXELL/SONY/MATSUSHITA SR920SW	Approx. five (5) years
V733		
V739		
V742		
V743		
V744		
V782	SEIKO/MAXELL/SONY/MATSUSHITA SR621SW	Approx. three (3) years
V810	SEIKO/MAXELL/SONY SR527SW	Approx. two (2) years
V811		
V821	SEIKO/MAXELL/SONY/MATSUSHITA SR626SW	Approx. three (3) years *Approx. two (2) years
V824*		
V827*		
V829		
Y121	SEIKO/MAXELL/SONY/MATSUSHITA SR626SW	Approx. four (4) years
Y167	SEIKO/MAXELL/SONY SR927SW	Approx. one and a half (1.5) years